

System DECT 35



AGFEO

einfach | perfekt | kommunizieren

User Instructions

The AGFEO DECT 35 Cordless System Phone is designed for the connection / registration to an AGFEO DECT S0 Base or an AGFEO DECT S0-Base plus.

The AGFEO DECT 35 will be supported by all AGFEO Telephone Systems from a firmware 8.0 and a DECT firmware from 2.6.

AGFEO GmbH & Co. KG will not accept any liability whatsoever for any damages which may have been caused by improper use of the DECT 35 Cordless System Phone.

About this User Guide

This user manual is intended for the telephone system with the firmware installed at the time of shipment. As the DECT35 Cordless System Phone is controlled from the telephone system certain features described in this manual may no longer apply if the system firmware is changed.

This manual contains user instructions for the DECT 35 Cordless System Phone and a brief reference regarding the system features. A detailed description of features relating to the telephone system can be found in the user guide of the telephone system.

Cordless System Phone

DECT 35

Table of Contents

User Instructions	2
About this User Guide	2
Table of Contents	3
Contents:	4
Charging the Battery Pack	4
DECT 35 Handset	5
Buttons of the DECT 35 Cordless Phone	6
DECT 35 Display	7
Status Display	7
Display Features Enabled	7
Switch Handset ON / OFF	8
Keypad Lock	8
Ringer On/Off	8
DECT 35 Settings	9
Phone Settings	9
Set Ringer of DECT 35	10
Select Display Language	10
Register Handset To Base Unit	11
Delete Registration	12
Delete Registration in Telephone System	12
Delete Registration in DECT 35 Handset	12
Function Button Assignment	13
Function Button Programming	13
Making Calls	13
Exchange Line Seizure „Direct“	13
Exchange Line Seizure with „9“ (0)	14
Call Log	14
Storing Displayed Numbers in Phone Book	15
Storing Numbers in Phone Book	15
Calling Stored Number (or Delete)	15
Phone Book	15
Cleaning	16
Accessories / Range	16
Rechargeable Battery	16
Battery Replacement	16
Replacing Battery	17
Declaration of Conformity	18

Cordless System Phone DECT 35

Contents:

- 1 DECT 35 Cordless Handset
- 1 Rechargeable Battery Pack
- 1 Charging Cradle with Plug In Power Supply
- 1 User Manual

Charging the Battery Pack

NOTE: The supplied battery has not been charged.

 
To charge the battery insert the handset in the charging cradle of the DECT 35. The charging status will be shown in the display of the phone. However, the display may remain without any indication for a few minutes if the battery will be charged for the first time. The handset will sound a beep once the battery has been fully charged.

- NOTE: The first initial charge should be carried out for at least 16 hours - regardless of the charging status display.
- After the initial charge you may return the handset into the charging cradle after each call. The charging of the battery is electronically controlled to guarantee an optimal and gentle charging process.
- The battery may get warm during charging.

An even longer battery life can be achieved if you discharge the battery completely every so often. To discharge the battery, leave the handset switched on until this will switch off by itself.





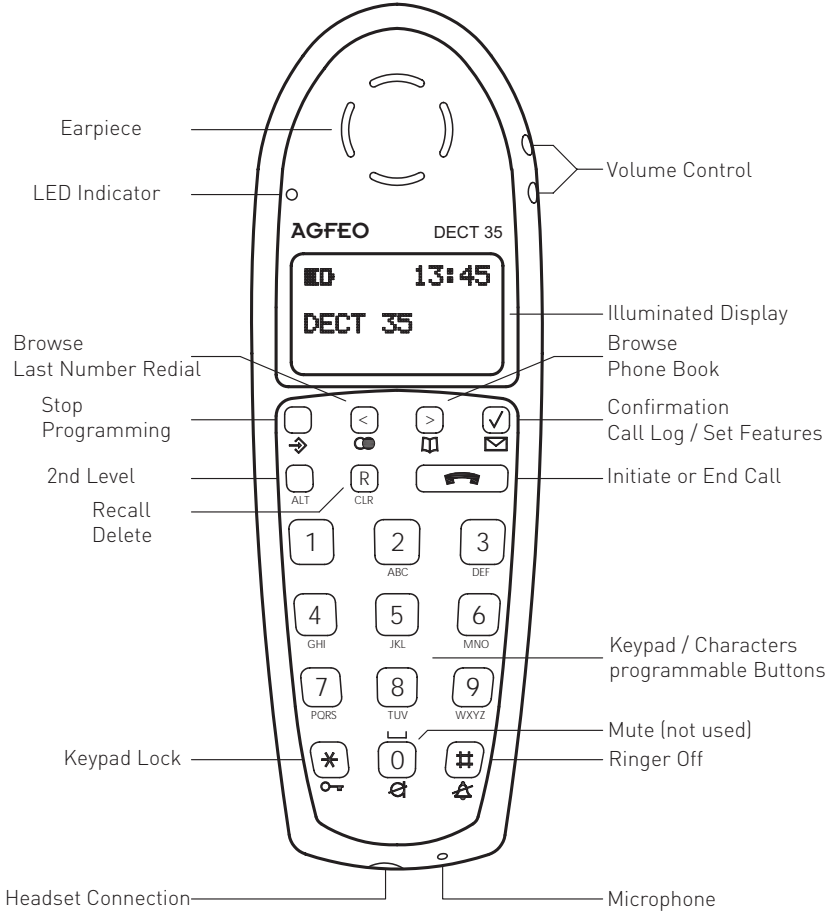










Cordless System Phone DECT 35

DECT 35 Handset




Cordless System Phone DECT 35

Buttons of the DECT 35 Cordless Phone

- | | |
|---|--|
|  Keypad - to dial or enter data |  Last Number Redial - LNR of AGFEO System and or of the DECT 35 handset. |
|  | |
|  Arrow Buttons - To browse through the display |  Programming of telephone system internal functions and DECT 35 internal functions. |
|  OK - To confirm entry |  Keypad Lock |
|  Alt - Go to 2nd keypad level and to use the freely programmable function buttons. |  Without any Function |
|  Recall - Enquiry or Brookers Call. |  Switch off tone ringer. Incoming calls will be signalled visually or by vibration alarm. |
|  Answer or End a Call. To Perform or Quit a function. |  Clear / Delete entry. |
|  Phone Book -Access System or DECT 35 Phone Book. | |
|  Messages - View Call Log and interrogate Answering Machine. | |

Cordless System Phone DECT 35

 DECT 35 Display



- DECT 35 is off hook / has radio contact with telephone system
- Browse through menu
- Calls are listed in Call Log
- DECT 35 is within range of base station

Status Display

 


- Status of S0 connections
- Status of extensions

- x** BRI ISDN trunk line. One line (one B-Channel) is in use. On incoming call X will be flashing.
- X** BRI ISDN trunk line. Both channels are in use.
- i** ISDN Extension. One line (one B-Channel) is in use.
- I** ISDN Extension. Both channels of the line are in use.
- Both B-channels of the ISDN – lines are available. (Extension or BRI trunk line)
- 18** Extension number, Static: Extension is busy, Flashing: Extension is ringing.

Display Features Enabled

To display features enabled, press the ALT button once.



- Pressing ALT
- Displays the features enabled

- K** Call Waiting ON
- R** Do Not Disturb (DND) ON
- U** Diversion / ISDN-Diversion ON.
- E** Call Forwarding / Alternative Extension ON
- N** Night Service
- T** Appointment Reminder ON.
- W** Wake Up Call ON
- L** Call Log
- A** Answering Machine (AGFEO A-Module 30 only)
- S** Sensor enabled

Cordless System Phone DECT 35

Switch Handset ON / OFF

Switch to ON:

Press the handset button for 1 second



Switch OFF:

Press the  button for 3 seconds



The DECT 35 will switch ON after the battery is connected and the handset is inserted into the charging cradle.

Keypad Lock

Enable the keypad lock:

Press the  button for 2 second



Disable the keypad lock

Press the  button for 2 seconds



Pressing any button will have no function when the keypad is locked.

To answer a call press the „Handset Button“, the keypad lock is automatically disabled during a call.

Ringer On/Off

Switch the ringer off:

Press the  button for 2 second



Switch the ringer back to on:

Press the  button for 2 second



If the tone ringer is switched off then incoming calls will be indicated visually and where applicable by vibration alarm.

Cordless System Phone DECT 35

DECT 35 Settings

To enter the DECT 35 settings menu, press and hold the button „Set“ for longer than one second.

Two different settings can be carried out within the menu **Profile**. Each of these profiles offer the following settings:

- Ringer volume: Here you may set the required ringer volume.
- Key Click: You may set if you hear a click when pressing buttons of the DECT 35.
- Signals: Setting the volume of the handset confirmation/warning tones.
- Vibrator: Will set the vibration alarm to on or off.
- Auto-Answer: This will set the auto answer function for the DECT 35. The auto answer function is useful if you wear a headset and wish to answer every call without the need to press a button on the handset.
- Charger: Here you can set if an incoming call should automatically be answered when the handset is removed from the charging cradle.
- Earpiece Vol: The volume of the handset can be set in 5 steps.
- Range Alarm: You may set if the handset should give an alarm if it goes outside the range of the DECT base station.
- Backlight: The backlit display can be switched on or off here.
- Keylock: You can set if the keypad lock will be manually enabled or lock automatically after 60 seconds.

The display language on the DECT 35 can be set from the menu **Language**.

The menu **Ringer** offers the setting of the 10 various ringing patterns (Calls Incoming/Setup Incoming Ringing Patterns in TK-Suite) which have been set in the telephone system. Due to this extension -, doorphone - and incoming calls are easily recognisable by the ringing pattern set.

The menu **Phonebook** offers the following selection:

- dial telephone numbers from the phone book of the DECT 35,
- store new phone book entries,
- delete phone book entries.

The menu **Base Station** offers the selection of:

- selection between 10 memory locations of base stations,
- register your cordless handset to another base station,
- delete a base station entry from your handset.

In the menu **Service** you will be able to display:

- the metering mode of your cordless phone,
- display the firmware version of your DECT 35 cordless phone.

Phone Settings

Press and hold down the button „Set“.

Select the setting „Set-Up Profile“.

Confirm with .

Using the arrow buttons select the profile for which you want to change the setting.

Confirm with .

You now can select the above described features.

With you can select the required menu, you may change the settings by using the arrow buttons.



The new setting will be activated by pressing .

To exit the phone setting menu press the „Set“ button briefly .



 
Cordless System Phone DECT 35

Set Ringer of DECT 35



Press and hold the „Set“ button.
Using the arrow buttons select the menu „Ringer“. Confirm with  .
Using the arrow buttons select the ringing pattern of the telephone system .
Confirm with  .

Select the required ringing pattern and confirm selection by pressing  .

To exit the phone setting menu press the „Set“ button briefly.




Select Display Language

Press and hold the „Set“ button.
Using the arrow buttons select the menu „Language“. Confirm with  .
The language set will be displayed. Select the required language by using the arrow buttons.
Confirm with  .

 
To exit this setting press the „Set“ button briefly.

In addition you may want to change the language of the AGFEO Telephone System.

Briefly press the „Set“ button to recall the menu language.

Select the display language required and confirm the selection by pressing  .

To exit programming press the „Set“ button briefly.



Cordless System Phone DECT 35

Register Handset To Base Unit

The DECT 35 handset can be registered to a maximum of 10 base units.

Should you only have one base unit, then you may ignore this section and all other information referring to the selection of a base unit.

Should the telephone system have more than one base unit in operation, then you select the base unit to which you want to register the DECT 35 handset to. The base unit can be allocated by use of the Identnumber. (Sticker on module or identification in display)

First switch your DECT Base to registration mode as described in the user manual of your DECT S0-Base or DECT Module.

On the cordless phone press and hold the „Set“ button.

Using the arrow buttons select the menu „Base Station“ and confirm by pressing .

By using the arrow buttons go to the menu „Subscription New“ and confirm by pressing . The handset will now search for a base station which is in registration mode.

If a base station is found then this will be shown in the display of the phone.

If more than one base station is in registration mode, select the required one by using the arrow buttons.

Confirm selection by pressing .

Select the required memory location by using the arrow keys.

Enter System PIN (in default 2580) and confirm by pressing .

The cordless system phone is now registered to the base station.



Cordless System Phone DECT 35

Delete Registration

A handset registration may be removed at any time. The registration will have to be deleted in the telephone system first followed by the deletion in the DECT 35 handset.

Delete Registration in Telephone System

Enter programming mode.

Enter system PIN after „9“, if this has been enabled.

Use the arrow buttons to display the DECT handset which you want to deregister from the base unit. Confirm by pressing .

The DECT phone is now deregistered from the base.



Enter System PIN
if so required



Delete Registration in DECT 35 Handset

On the DECT 35 handset press and hold the „Set“ button for 2 seconds.

 
Using the arrow buttons go to the menu „Base Station and confirm with .

Continue to use the arrow buttons and select „SUBSCRIPTION REMOVE“ and confirm with .

Select the base unit which you would like to delete from the DECT 35 and confirm by pressing .



Confirm the final request with .

The base unit is now deleted from the DECT 35.



Cordless System Phone DECT 35

Function Button Assignment

The function button assignment can be individually programmed to your own requirements. You may define which required function will be available for each button. Each of the 10 buttons can have a function stored which can be recalled by pressing   0-9. If a function button has been pressed in error, then pressing „Alt and number“ again will recall the new function. In default all function buttons have „Phone Book“ assigned to them.

Function Button Programming

Enter programming mode.
Select function button which is going to be changed.

Browse through the available functions by using the arrow buttons.

Confirm selection.
Select another button to be changed or end programming mode.



Making Calls Exchange Line Seizure „Direct“

Extension Calls:

Press the hash button followed by the required extension number.
Press the handset button.

External Calls:

Dial the required telephone number and then press the handset button.

Pick Up External Call:

Another telephone is ringing, press the handset button followed by  . Call is picked up.



Cordless System Phone DECT 35

Exchange Line Seizure with „9“ (0)

Extension Calls:

Dial the required extension number and press the handset button.

External Calls:

Dial „9“ to get a line followed by the telephone number required.

Press the handset button.

Pick Up External Call

Another telephone is ringing, press the handset button followed by . Call is picked up.



Call Log

Display Call Log:

(Only possible if enabled in the Telephone System)

Press the button.

Press again the to open the call log.



Dialling from the Call Log:

Select the required phone number by using the arrow buttons, press or press the handset button.



Deleting a Number from the Call Log:

Select the required phone number to be deleted from the call log by using the arrow buttons.

Press „Clear“ .



Cordless System Phone DECT 35

Phone Book

The handset has its own phone book with up to 80 entries. Each entry can consist of up to 24 alphabetic - and 24 numeric characters to store names and numbers.

Storing Displayed Numbers in Phone Book

A telephone number is shown in the display
Press Phone Book Button.

Confirm selection.

Enter name and confirm entry.

NOTE:

Please observe „Line Seizure“ settings. If the direct exchange line seizure is disabled, then entries must be prefixed with line seizure digit.



Storing Numbers in Phone Book

Access phone book

Confirm entry

Enter telephone number and confirm.

Enter name and confirm.

NOTE:

Please observe „Line Seizure“ settings. If the direct exchange line seizure is disabled, then entries must be prefixed with line seizure digit.



Calling Stored Number (or Delete)

Access phone book

Enter first character
and / or
browse to the required entry by using the arrow
buttons

Call displayed entry

or delete



Cordless System Phone DECT 35

Cleaning

- Only wipe the cordless phone with a slightly damp cloth or dry anti static cloth.
- Please ensure that no moisture is allowed to enter the unit.

Accessories/Range

Accessories (Available via our dealer network)

The following items are available via our dealer network: replacement batteries, head sets of various manufacturers, charging cradle, DECT repeater to extend the range, leather case and belt clip.

Range

The maximum range between DECT 35 handset and DECT S0-Base plus can be up to 300 metres in line of sight. However, the range will be reduced by obstacles between base and handset such as walls and furniture. As a general rule the range within a building will be approx. 50 metres.

Rechargeable Battery

Standby Time

max. 120 hours

Talk Time

max. 12 hours

 
Battery Replacement

- Please use only original AGFEO DECT 35 rechargeable batteries.
- DO NOT use any other charging device as the rechargeable batteries could be damaged.

Please dispose of old batteries responsibly.

Cordless System Phone DECT 35


Replacing Battery

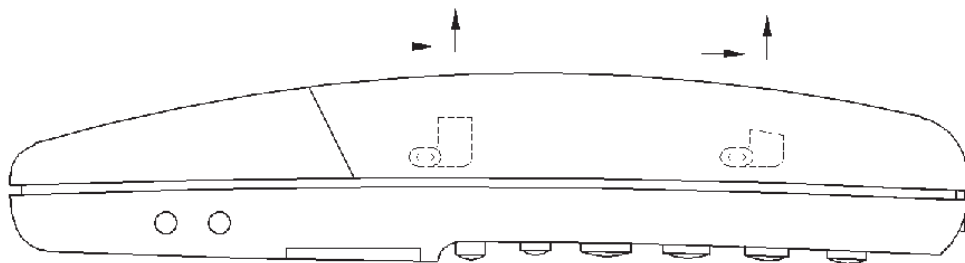

To open the battery compartment, press the cover with your thumb and slide towards the headset connection, then lift this upwards. To refit the cover follow this instruction in the reverse order.

Approved rechargeable batteries:

 Only the enclosed battery is approved for use with this handset. **Do not use any other battery.**

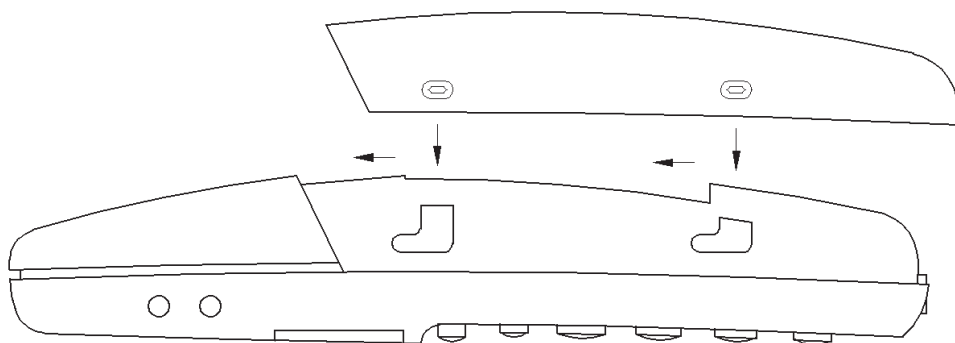

CONFORMITY DECLARATION

Identification of unit: PP3
Category: DECT
Trade name: Z-3040 Agfeo
Model/type: u235 2307

Producer's name and address:

KIRK telecom A/S
Langmarksvej 34
DK-8700 Horsens
Denmark

This declaration is based on the following standards:

TBR 6

Place and date:

Signature:

Horsens 27-02-01



A handwritten signature in black ink, appearing to be 'S. R.', written over a horizontal line.



The crossed out wheeled bin on the product means that this belongs to the group of Electro- and electronic apparatus.

In this context you are directed by the European regulation to dispose of used apparatus

- at the point of buying an item of equal proportion / value
- at the local available collection point for disposal

With this you will participate in the reuse of material and valorisation of disused electric- and electronic apparatus, which otherwise could be a health hazard and be negative to the environment.



Identno. 1102002
Errors and Omissions Excepted
Printed in Germany
1080

AGFEO GmbH & Co. KG
Gaswerkstr. 8
D-33647 Bielefeld
Internet: <http://www.agfeo.com>