

## Steckernetzteil STE 30/ 40/ ST 31/ 40/ 42/ 45

### Anschluss des Steckernetzteils am STE 30


#### Ihre STE 30 ist direkt angeschlossen

(vergl. Anleitung STE 30):  
Das Netzteil kann sowohl die STE 30 als auch das ST 31 speisen. Tauschen Sie dazu das Verbindungskabel zwischen ST 31 und STE 30 durch das dem Netzteil beigelegte 6 adrige Kabel aus. Schließen Sie das Netzteil an der Aux-Buchse der STE 30 an.

#### Ihre STE 30 ist abgesetzt angeschlossen

(vergl. Anleitung STE 30):  
Das Netzteil kann nur eine STE 30 speisen. Schließen Sie das Netzteil an der Aux-Buchse der STE 30 an.

interner S0      mitgeliefertes Verbindungskabel

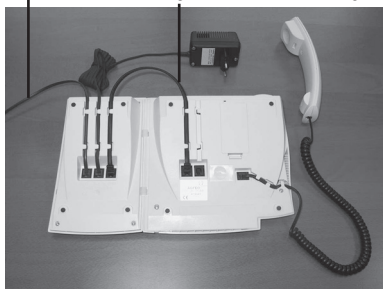


## Steckernetzteil STE 30/ 40/ ST 31/ 40/ 42/ 45

### Anschluss des Steckernetzteils am Systemtelefon


**Bitte beachten Sie**, dass Sie aufgrund der höheren Leistungsaufnahme der AGFEO Systemtelefone und der vorliegenden, physikalischen Leistungsgrenzen der im Markt befindlichen AS 40P (P400-1), AS 4000 (P400-1) und AS 100 IT (P400 IT) ggfs. zusätzliche Netzteile einsetzen müssen !

Da ein Systemtelefon, je nach Ausführung und Ausstattung (alle LEDs an, A-Modul gesteckt, aktiver Ruf, Ruflautstärke max.) eine max. Leistungsaufnahme von bis zu 2,85 Watt aufweisen kann und die Absicherung eines S0-Moduls 440 immer pro Doppelport passiert (4,5 Watt), kann diese Grenze bei einer Belastung von 3 Systemtelefonen im „Worst Case Fall“ schon überschritten sein. Im Fehlerfall würde die Anlage für den relevanten Doppelport eine Schutzabschaltung vornehmen (Systems/ISDN Bus ohne Funktion, nach einem Reset der Anlage wird der Doppelport von der Anlage wieder freigeschaltet) !

In dieser beschriebenen Konstellation (o.ä.) sollten Sie ein Netzteil vorsehen um den „Worst Case Fall“ damit abzufangen !

Schließen Sie das Netzteil an der mit dem Symbol  gekennzeichneten Buchse an und verlegen Sie das Kabel durch den Kabelkanal im Systemtelefon.


Anschluss für optionales Netzteil oder optionales STE 40

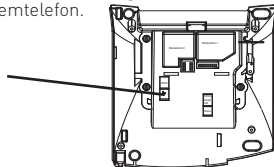

## Steckernetzteil STE 30/ 40/ ST 31/ 40/ 42/ 45

### Anschluss des Steckernetzteils am STE 40

Wenn Sie eine STE 40 an Ihrem Systemtelefon betreiben wollen, so muß diese STE 40 mit einem Netzteil gespeist werden. Bis zu zwei an einem Systemtelefon angeschlossene STE 40 werden durch ein Netzteil versorgt.

Schließen Sie das Netzteil an der mit dem Symbol  gekennzeichneten Buchse an und verlegen Sie das Kabel durch den Kabelkanal im STE 40.

## Steckernetzteil STE 30/ 40/ ST 31/ 40/ 42/ 45

### Technische Daten

Steckernetzteil	
- Ausgangsspannung	40 V
- Ausgangsleistung	Inenn = 350 mA
- Länge des Anschlusskabels	3 m
Verbindungskabel	
- Länge	ca. 0,3 m



Die auf dem Produkt angebrachte durchkreuzte Mülltonne bedeutet, dass das Produkt zur Gruppe der Elektro- und Elektronikgeräte gehört. In diesem Zusammenhang weist die europäische Regelung Sie an, Ihre gebrauchten Geräte

- den Verkaufsstellen im Falle des Kaufs eines gleichwertigen Geräts
- den örtlich Ihnen zur Verfügung gestellten Sammelstellen (Wertstoffhof, Sortierte Sammlung usw.) zuzuführen.

So beteiligen Sie sich an der Wiederverwendung und der Valorisierung von Elektrik- und Elektronik-Artgeräten, die andernfalls negative Auswirkungen auf die Umwelt und die menschliche Gesundheit haben könnten.

Identnr. 1102826  
Änderung und Irrtum vorbehalten.  
Printed in Germany  
0137

AGFEO GmbH & Co. KG  
Gaswerkstr. 8  
D-33647 Bielefeld  
Internet: <http://www.agfeo.de>

## Plug In Power Supply STE 30/ 40/ ST 31/ 40/ 42/ 45

### Connection of Power Supply to STE 30

#### STE 30 with Phone

(see also Manual STE 30):


The plug in power supply unit will power both the STE30 and ST 31. Please replace the cable connecting the ST31 and STE 30 with the 6 wire cable enclosed with the power supply. Connect the RJ plug of the power supply to the AUX socket of the STE 30.

#### STE 30 as Stand-Alone Unit

(see also Manual STE 30):

The plug in power supply unit will power only one STE 30. Connect the RJ plug of the power supply to the AUX socket of the STE 30.

Internal S0      Supplied connection cable

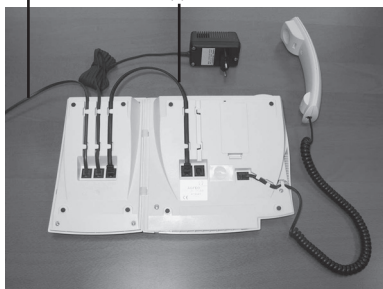


## Plug In Power Supply STE 30/ 40/ ST 31/ 40/ 42/ 45

### Connection of Power Supply Unit to a System Phone

**Please note:** That due to a higher power consumption of the AG-FEO system phone and the limited capacity of the systems already on the market such as the AS 40P (P400-1), AS 4000 (P400-1) und AS 100 IT (P400 IT) you may require an additional power supply units. Depending on model and state (all LED's lit, optional answering machine module installed, the phone is ringing at full volume), a system phone will have a max. power consumption of up to 2.85 Watts. The max. output for a S0 440 module is 4.5 Watt for each two ports combined. This would mean that in the worst case scenario three system phones would already exceed the maximum limit set. This could activate the overload protection circuit and shut down the power supply of the relevant combined ports. (System Phones are none functional / S0 bus no power. Power will be restored after system reset) In such cases it is suggested to connect an external power supply to the ISDN bus to avoid such eventualities.

Please connect the RJ plug of the power supply to the socket marked with this symbol  and guide the cable through the cable channel of the system phone.


Connecton for optional  
power supply or optional  
STE 40

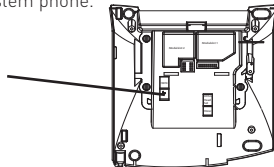

## Plug In Power Supply STE 30/ 40/ ST 31/ 40/ 42/ 45

### Connection of Power Supply Unit to STE 40

Should you want to operate an STE 40 on your system phone, then it will become necessary to connect a seperate power supply unit to the STE 40. Up to two STE 40 which are connected to your system phone will be powered by the same power supply.

Connect the power supply to the socket marked  and guide the cable through the cable channel of the STE 40.

## Plug In Power Supply STE 30/ 40/ ST 31/ 40/ 42/ 45

### Specification

Plug In Power Supply	
- Output Voltage	40 V
- Output Power	Inenn = 350 mA
- Cable length	3 m
Interconnection Cable	
- Length	ca. 0,3 m



The crossed out wheeled bin on the product means that this belongs to the group of Electro- and electronic apparatus.

In this context you are directed by the European regulation to dispose of used apparatus

- at the point of buying an item of equal proportion / value
- at the local available collection point for disposal

With this you will participate in the reuse of material and valorisation of disused electric- and electronic apparatus, which otherwise could be a health hazard and be negative to the environment.